

oting

ycler® g2 controller.

ice has power.
mostat is operational.
ace will call for heat from the

operates with a fan only signal
ace is providing 24VAC to the
nforms to the wiring diagram.
firmly seated on the base.

**he furnace fan on and off, but
es not cycle.**

ycler® g2 is providing a 24VAC
d damper.
otorized damper is operational
with a 24 VAC signal
ity in the wiring between the
cler® g2
er switch is in up or automatic

an cycling calls

onforms to the wiring diagram.
e is properly connected.
e interrupted by the AirCycler®
ire in parallel.

oller has seen the
on for more than 4 hours.

Connect™ switch to g2

and frequently asked questions,
ages/troubleshooting

nation please visit:
cts

al Support:
AN.CONTRol
'326.2668)

YCLER®
AIN STREET
LD, MA 02050
CYCLER.COM



AirCycler® g2 INSTALLATION & USER'S MANUAL

**VENTILATION MADE BREEZY!™
A BREEZE TO INSTALL • A BREEZE TO USE!**

This product may be protected by one or more of the following patents and patents pending: 8185244, 7258280, 6431268, 881806, 547017, Canada 2245135

INTRODUCTION


In the past, homes depended on natural leaks for ventilation. Today, energy efficient homes are built to reduce natural ventilation and leaks. Inadequate ventilation can increase indoor air pollutants to harmful levels. Indoor air quality is typically 5 to 10 times more polluted than outside air. Controlled ventilation provides adequate air flow to the home without compromising its efficiency.

SAFETY CONSIDERATIONS

Read and follow manufacturer's instructions carefully. Follow all local electrical codes during installation. All wiring must conform to local and national electrical codes. Improper wiring or installation may result in personal injury or product and property damage.

INSTALLATION CONSIDERATIONS

The AirCycler® g2 requires 24VAC (R and C terminals) to be connected for proper operation. The controller will not operate without these two connections.



Vnc - Normal Closed Vent
R - 24VAC Power
W - Heating
Gt - Fan From Thermostat
Gf - Fan to Furnace
C - Common
V - Vent
Ex - Exhaust Fan

The wires (R, C, & W) from the air handler to the thermostat can run parallel with the wiring from the AirCycler® g2 to the air handler. The fan wire (G) must be interrupted by the AirCycler® g2. Some thermostats do not require a common (C) connection. The AirCycler® g2 requires this for power, which must be wired to the furnace.

DAMPER LOCATION

The fresh air damper can be located anywhere in the inlet duct. Minimize the length of the inlet duct to improve air flow and improve system efficiency. It is recommended that the damper be as close to the return air plenum and the AirCycler® g2 controller as possible, and the inlet duct connect to the return plenum upstream of the system filter, and down-stream of any duct mounted sensors.

DAMPER INSTALLATION

The damper may be installed in any position. It is recommended to install it with the motor at the 12 o'clock position if mounted horizontally. Air may flow through in either direction, although it is recommended to install with the crimped end as the outlet. Use care to avoid distorting the damper housing and provide adequate support. **Upon system start up be sure to set damper power switch to UP or AUTOMATIC position.**


CHOOSE A FRESH AIR LOCATION

ASHRAE recommends that the fresh air intake be located at least 10 ft. from any source of pollutants, such as auto exhaust, dryer exhaust, exhaust from any fuel-burning appliances, etc. Avoid installation near odor sources such as garbage bins or barbecue grills. A minimum of 3 ft. above ground is recommended to avoiding ingress of leaf litter, grass clippings, etc. Do not use a crawl space, basement, or attic as a source of intake air. Always be sure to comply with local building codes and requirements regarding fresh air inlets.

BATTERY (MODEL CR1220)

The AirCycler® g2 is equipped with a backed-up clock for use with the setting **ONLY**. If not setting the included battery is not required. saved in nonvolatile memory.

NORMAL OPERATION DISPLAY

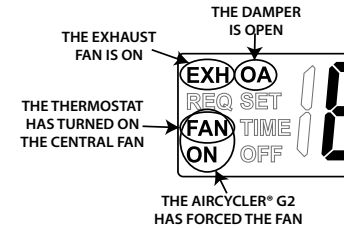

- When the AirCycler® g2 is in the display will show the pe complete for the current ho
- If the central fan is on, the F icon will be illuminated.
- If the exhaust (bath) fan is o illuminated.
- If the outside fresh air damp be illuminated.
- If the exhaust fan is running bathroom occupancy, the d and EXH icons will be illumii
- If the thermostat is calling f icon will be illuminated with
- The ON icon is only illumina has forced the central fan or *Only*)
- Press the MODE key at any t operation to set the current
- If the EXH icon is blinking, it has been on for more than 4 to the AirCycler® g2 controll

INSTRUCTIONS

The unit can be installed near the furnace/air handler unit.

Turn off all power to the furnace. There may be more than one furnace. Failure to do so can cause injury or death.



Based on Calculated Flow, press the DOWN arrow to set based on 3.0.




When based on Calculated Flow, press the DOWN arrow to set based on 3.0.

Press the DOWN arrow to advance to the next setting.

SETUP

APPLY AIR FLOW

Amount of air that enters the house from the outside air vent. Enter the amount of variable speed air flow values for heat, cool and fan.



EXHAUST AIR FLOW*

Amount of air from the exhaust fan is 60 CFM.

CONSTANT AIR FLOW

Set constant air flow codes. For example, A. Factory default is 30 CFM.

Press the DOWN arrow and return to normal operation.

IS COMPLETE

Optional Mixing Time, Operation Hours, etc. See Sections 3.3-3.6 for details.

3.0 CALCULATED TIME SETUP

3.1 SET MINUTES/HOUR OF SUPPLY AIR REQUIRED

Enter the minutes per hour that you require fresh air to be brought into the home. Factory default is 20 minutes.



For installations without the FanConnect™ switch, continue to section 3.3.

3.2 SET MINUTES OF EXHAUST FAN REQUIRED

Enter the desired minutes per hour you want the exhaust fan to run. Factory default is 20 minutes per hour.



If the FanConnect switch is not detected, make sure it is in the OFF position.

SLAVE MODE

Press the DOWN arrow until the countdown reaches 0. Press again to get to SL. (SL= slave mode) In slave mode the exhaust fan runs anytime the central fan is running with the fresh air damper open. Slave mode will provide a "balanced" mode of operation.

3.3 SETTING THE OPTIONAL MIXING TIME

If the user needs more central fan time for whole house mixing than the amount that is provided by ventilation time, the central fan can be configured to run an additional time period to complete the mixing period. Factory default is 0 or OFF.



The fresh air damper will not be open during this extra time.

3.4 SETTING OPERATION HOURS

If the user does not want the ventilation system to run constantly, you can set ON time and OFF time. Factory default is OFF. If you are not setting an ON and OFF time, continue to section 3.6.


If you enter YES, the AirCycler® g2 will prompt you to enter the hour you would like the ventilation to begin and the hour you want it to end followed by the current time.



Set the hour you want the ventilation to START.



Set the hour you want the ventilation to STOP.



3.5 SETTING CURRENT TIME

Enter the current time.



3.6 EXHAUST FAN DELAY TIME (If using optional FanConnect™ switch)

Set the desired length of time you would like the bath fan

to run after the FanConnect™ has been turned off. Factory default is 10 minutes.



Press MODE to save all settings and return to normal operation.

CALCULATED TIME SETUP IS COMPLETE

4.0 NORMAL OPERATION DISPLAY STATUS & SETTINGS

4.1 CURRENT STATUS

To get detailed status information, press the UP arrow. The status displays are the same for both Calculated Flow and Calculated Time modes.


4.1.1 MINUTES LEFT

The first display is the number of minutes left in the period (hour). Pressing the UP arrow again gets you to the next status screen.



4.1.2 OUTSIDE AIR TIME ELAPSED

This display shows the number of minutes this period that the outside air damper has been open with the central fan running.



4.1.3 EXHAUST RUN TIME*

This display shows the elapsed run time of the exhaust fan for this time period.



4.1.4 EXHAUST DELAY TIME*

This display shows the exhaust delay time set.



4.2 CURRENT SETTINGS

Pressing the DOWN arrow during normal operation, scrolls through the current setting entered by the installer.

For Calculated Flow mode the screens will show:

Required CFM set
measured outside air CFM
measured exhaust air CFM*
exhaust fan delay time*
If operating time is enabled:
Operating Time On
Operating Time Off

For Calculated Time mode the screens will show:

Exhaust run time set*
Outside air time in minutes
Exhaust fan delay time*
If operating time is enabled:
Operating Time On
Operating Time Off

* If optional FanConnect™ switch is installed

4.3 SET CURRENT TIME

By pressing the MODE key you will cycle through current time of day and will be able to change it if needed. See section 3.5.


4.4 RECORD ALL SETTINGS ON THE INSTALL STICKER PROVIDED. LIMITED WARRANTY WILL BE VOID IF THE STICKER IS NOT PRESENT.

5.0 RESET TO DEFAULT VALUES

On initial power up when all icons are lit, hold the UP arrow for 10 seconds to be prompted to reset all settings to default.

WIRING DIAGRAM

Use the following diagram to wire the controller. The controller will not operate according to the manufacturer's

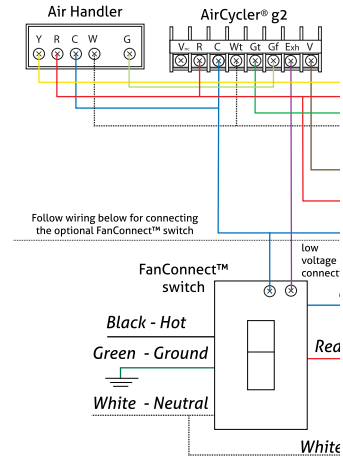

APPENDIX A - ASHRAE 62.2 Ref

NO. OF BEDROOMS	SQUARE FOOTAGE			
	1000	1500	2000	2500
1	25	30	35	40
2	33	38	43	48
3	40	45	50	55
4	48	53	58	63
5	55	60	65	70

Ba
N= Number of

For more information about A
www.ashrae.org